 
 
 


ES - L90PR ES-L100PR

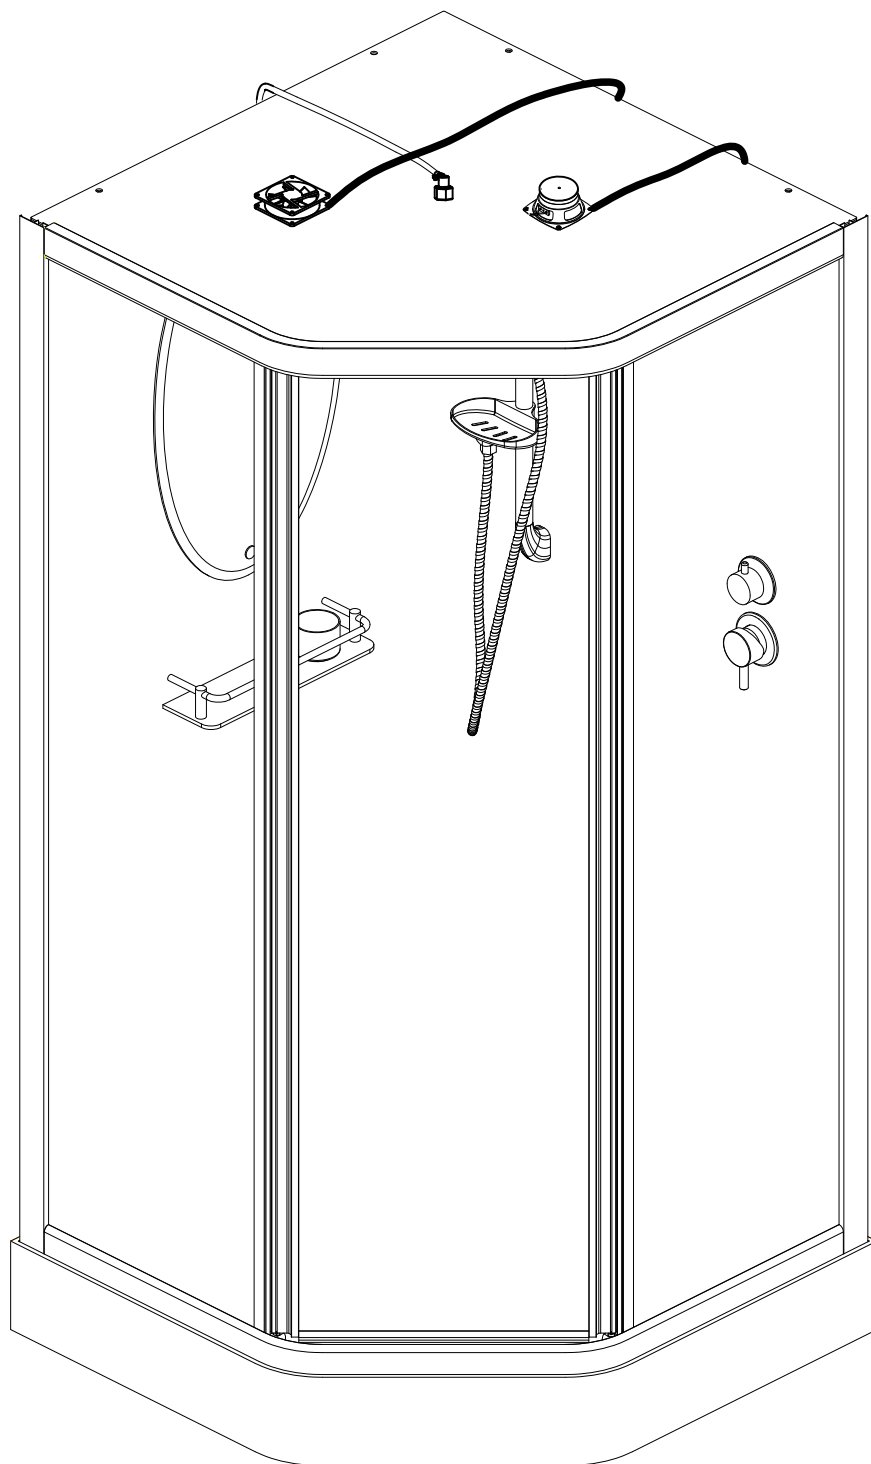

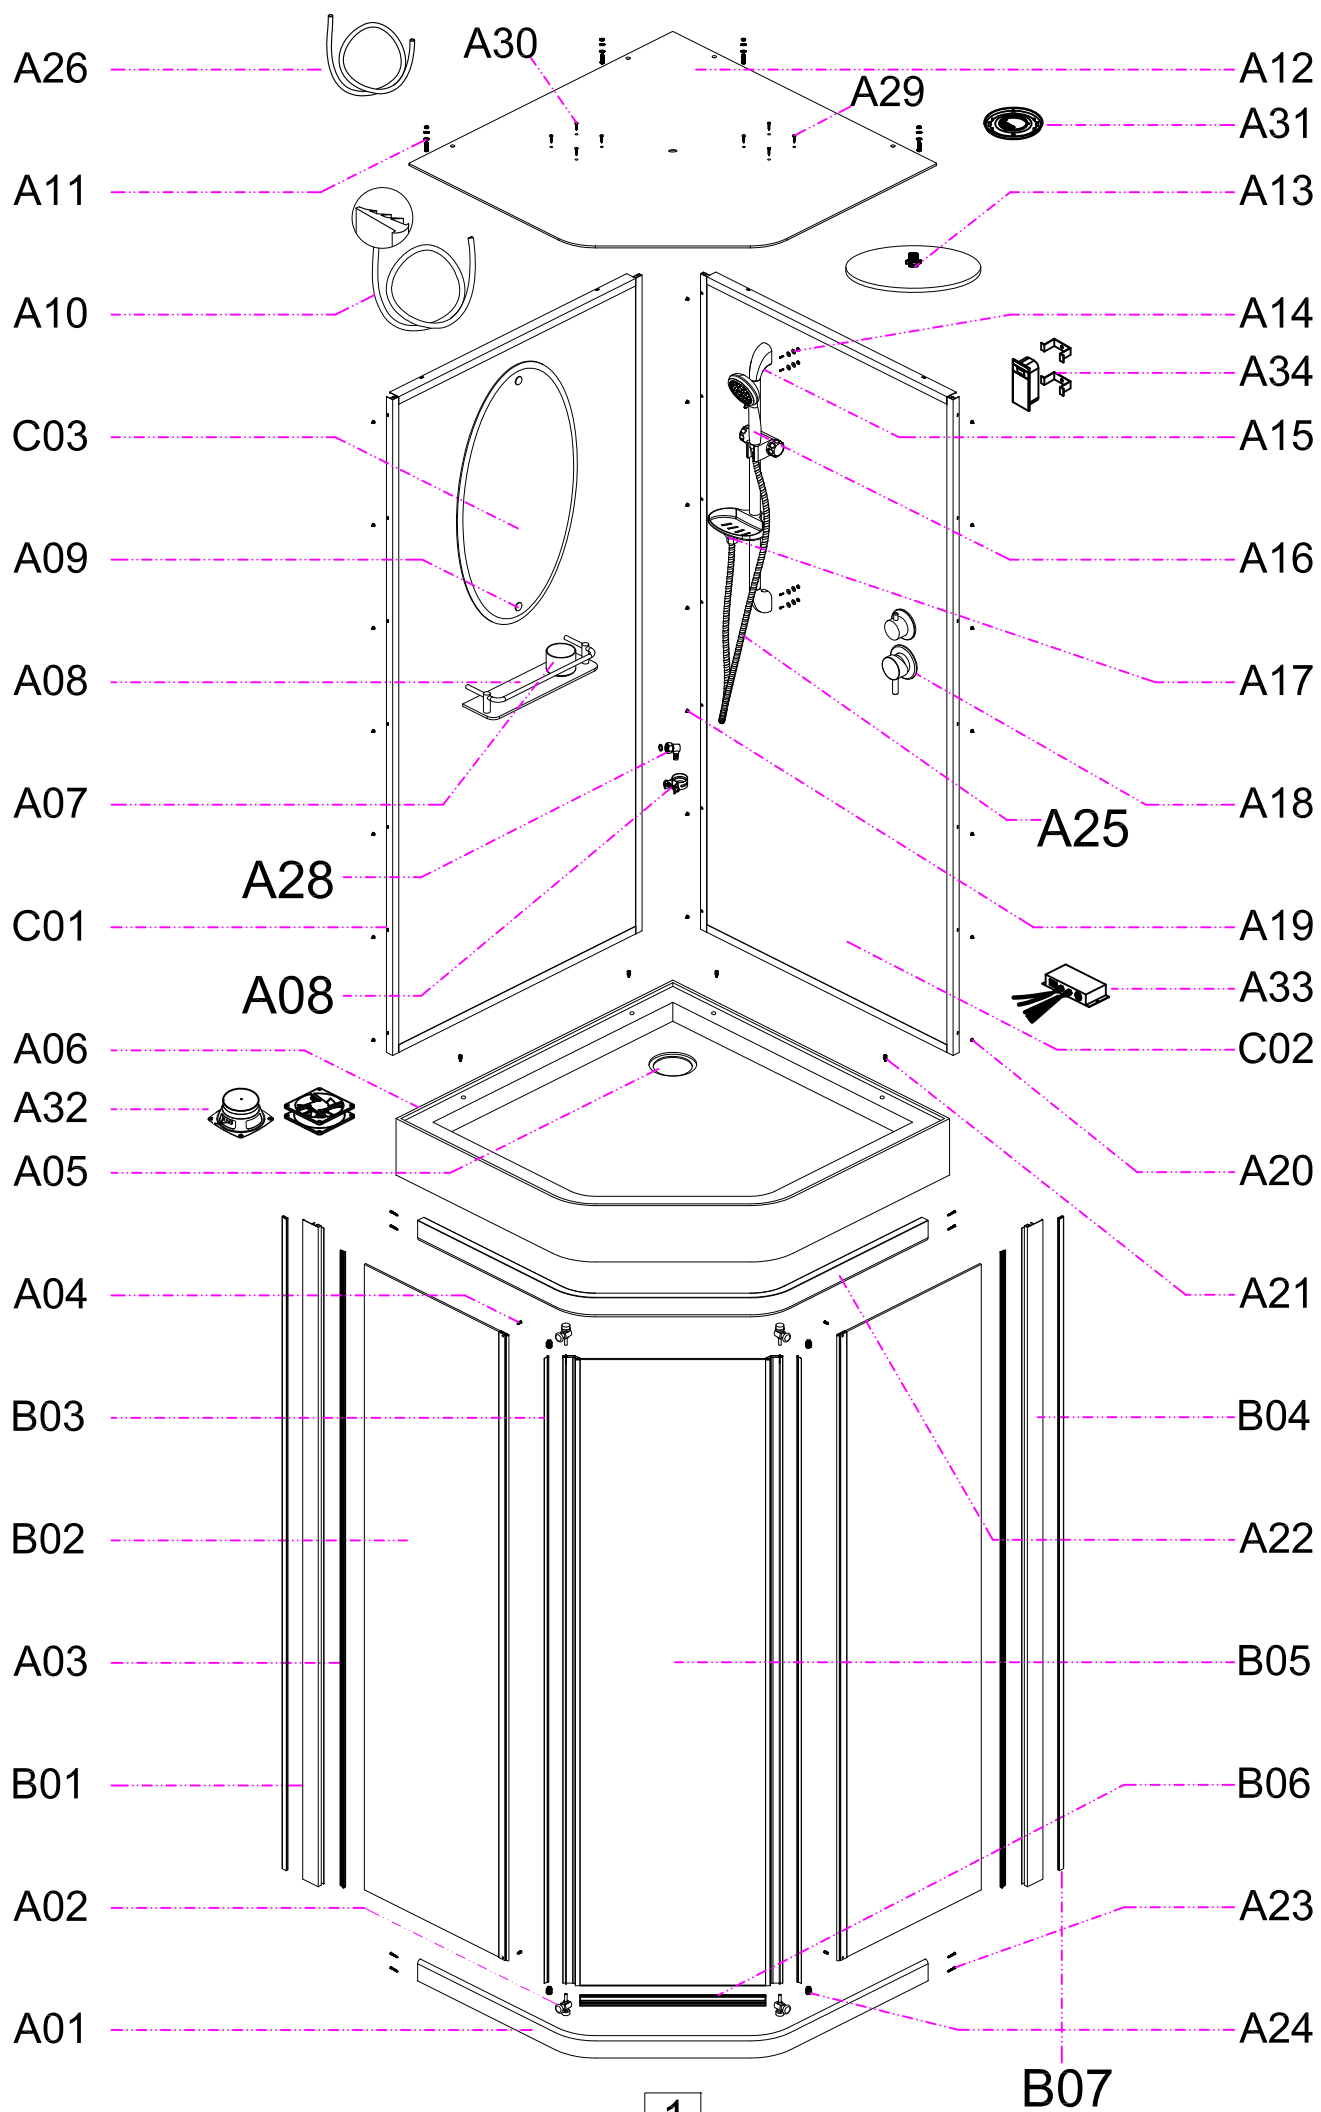



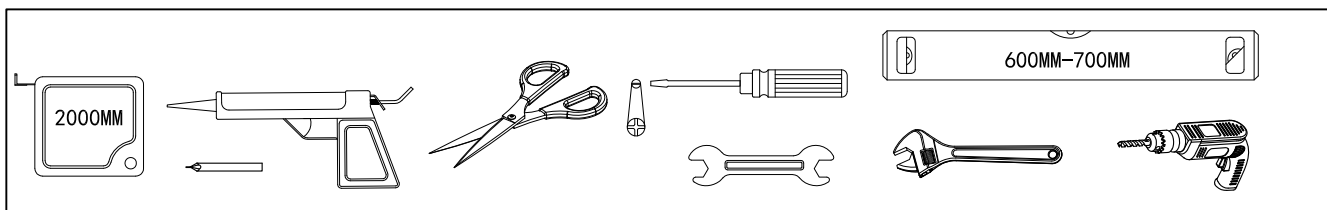


A01 X1	A02 X2	A03 H=3.8MM L=1859MM X2	A04 ST4X13 X4	A05 X1	A06 X1
A07 X1	A08 X1	A09 X2	A10 H=3.2MM L=1545MM X1	A11 M4X20 X4	A12 X1
A13 X1	A14 PVC M4X20 X4	A15 X1	A16 X1	A17 X1	A18 X1
A19 ST4X25 X7	A20 ST4X13 X14	A21 90PR X4 100PR X6	A22 X1	A23 M3.5X30 X8	A24 X4
A25 X1	A26 X1	A27 X2	A28 X4	A29 ST3.5X13 X4	A30 ST3.5X38 X4
A31 X2	A32 X1	A33 X1	A34 X1		




B01 X1	B02 X2	B03 X2	B04 X1	B05 X1	B06 X1	B07 X2
---------------	---------------	---------------	---------------	---------------	---------------	---------------







C01 X1	C02 X1	C03 X1
---------------	---------------	---------------




 
 
 
ES-90PR


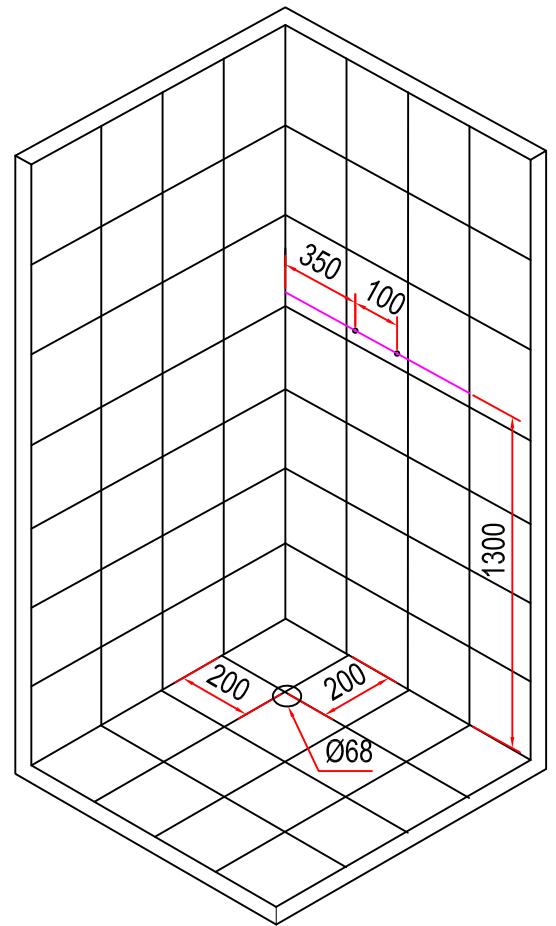
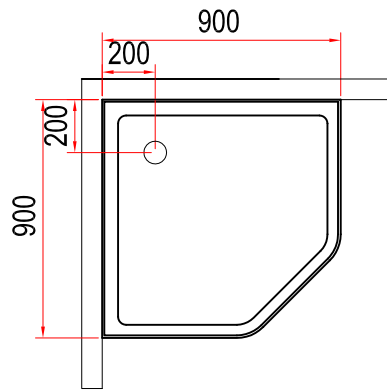
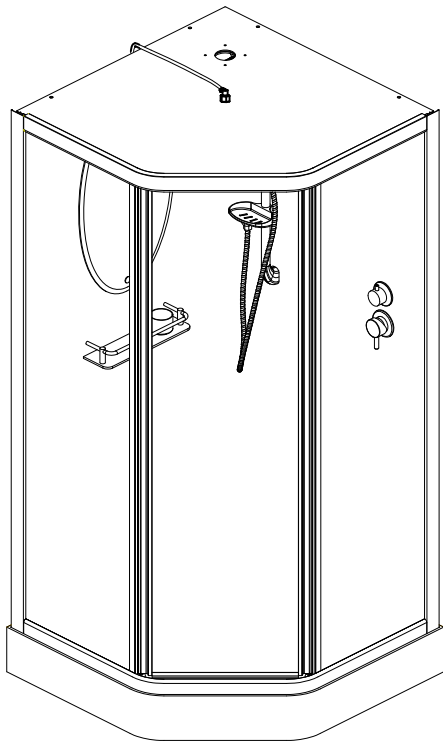














ES-100PR








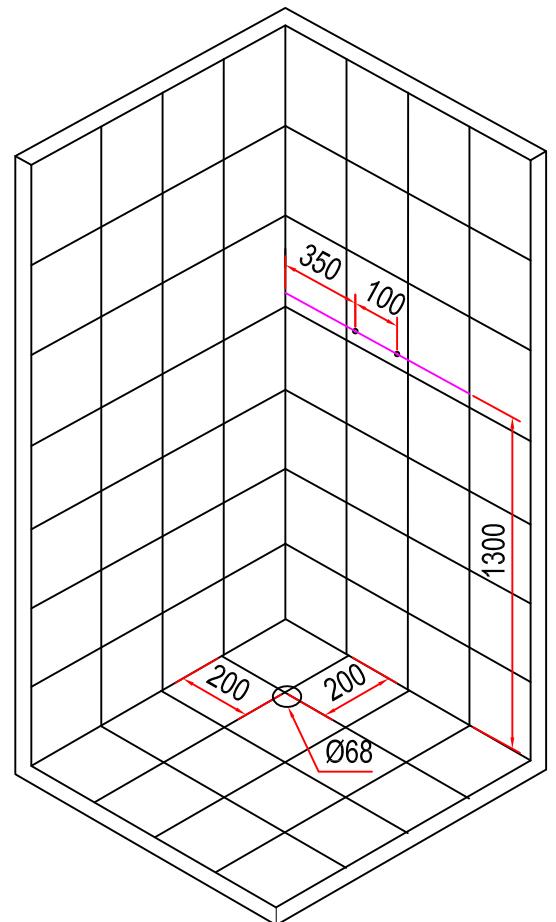 
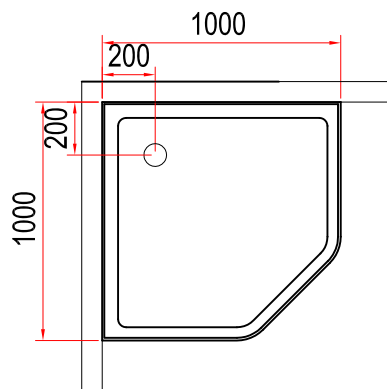 
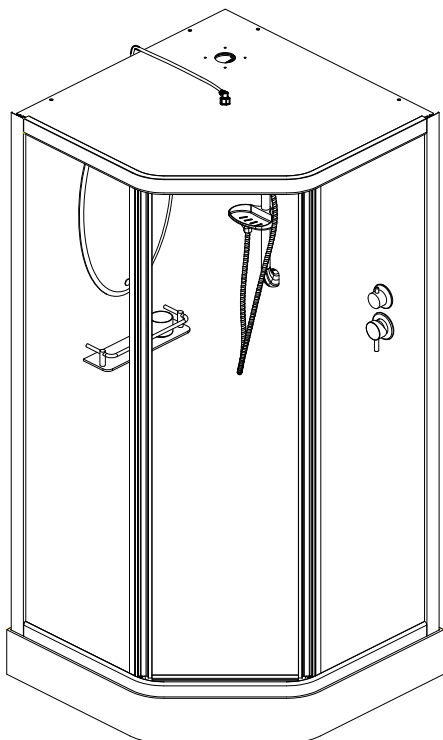 


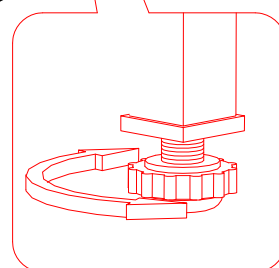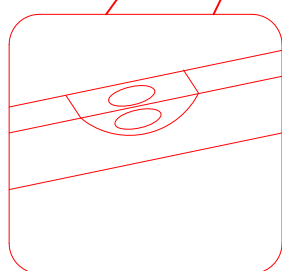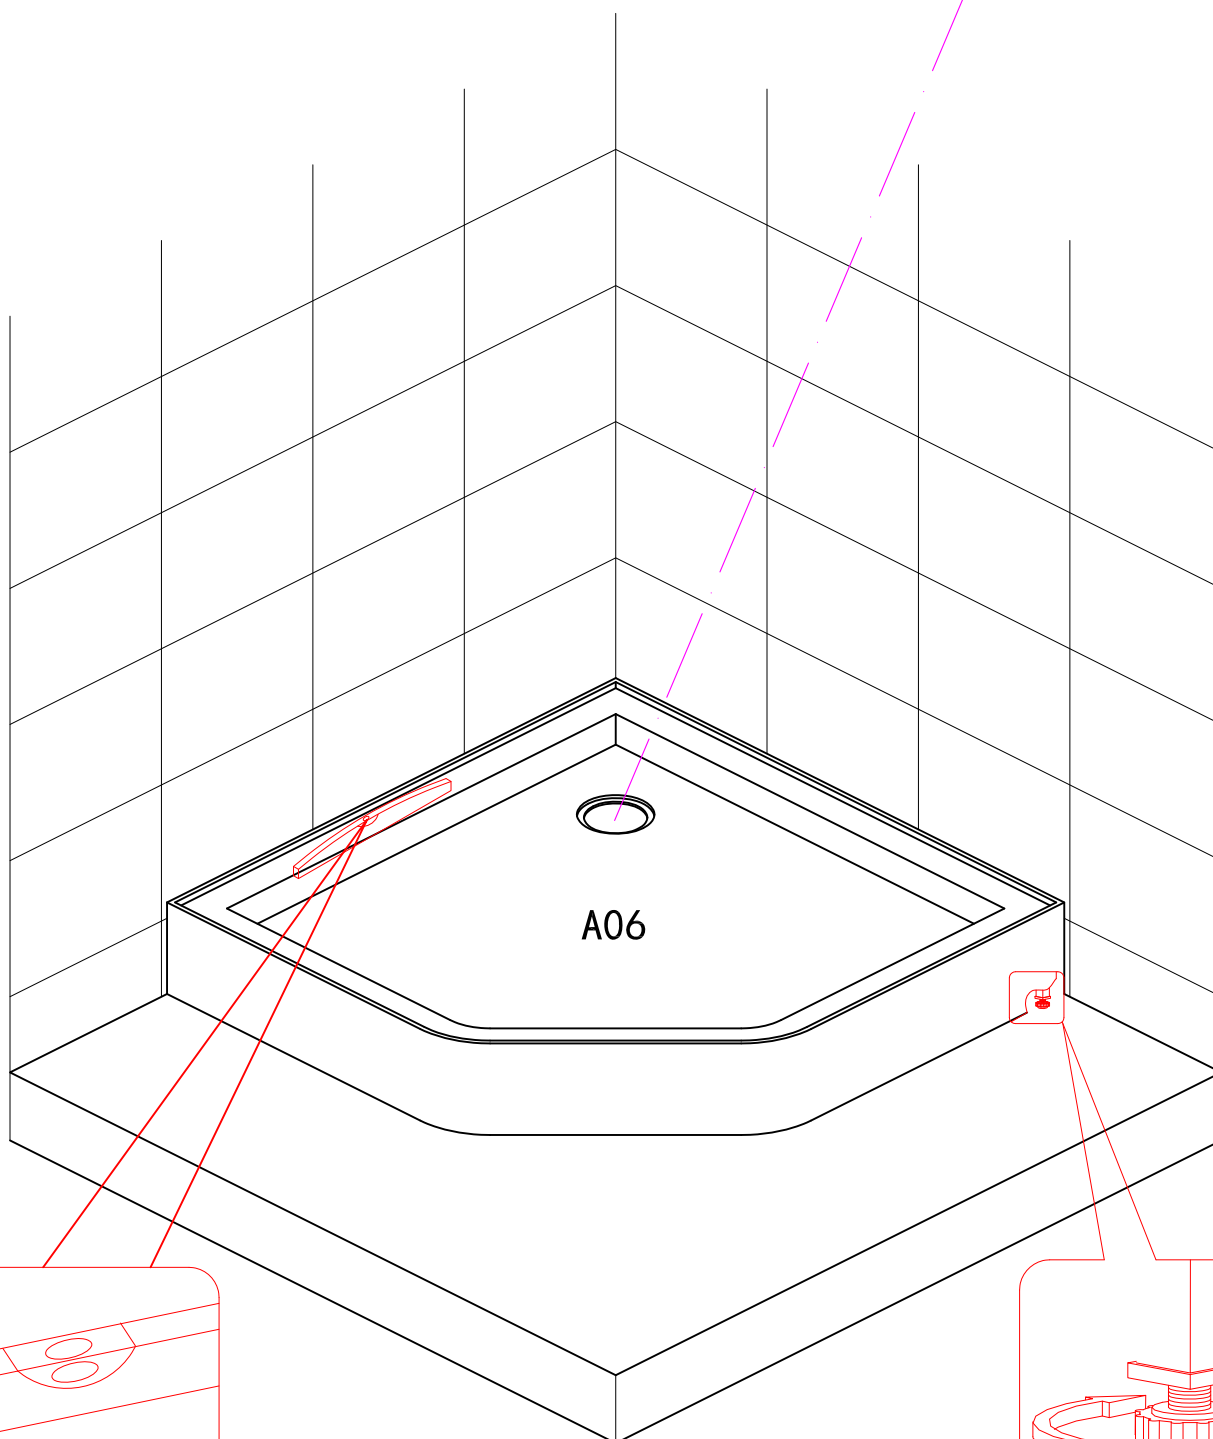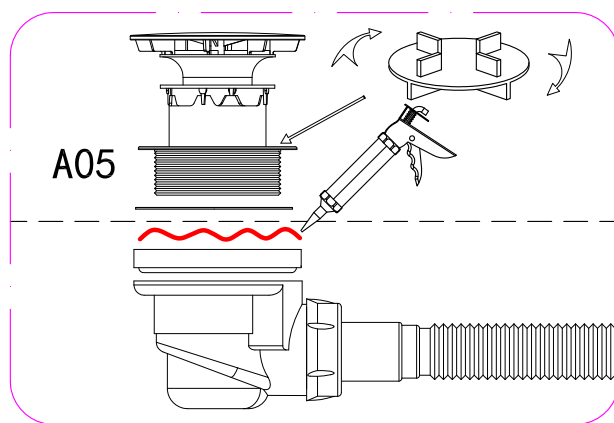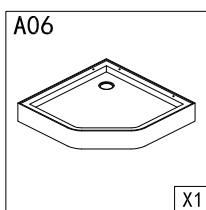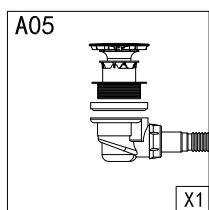      


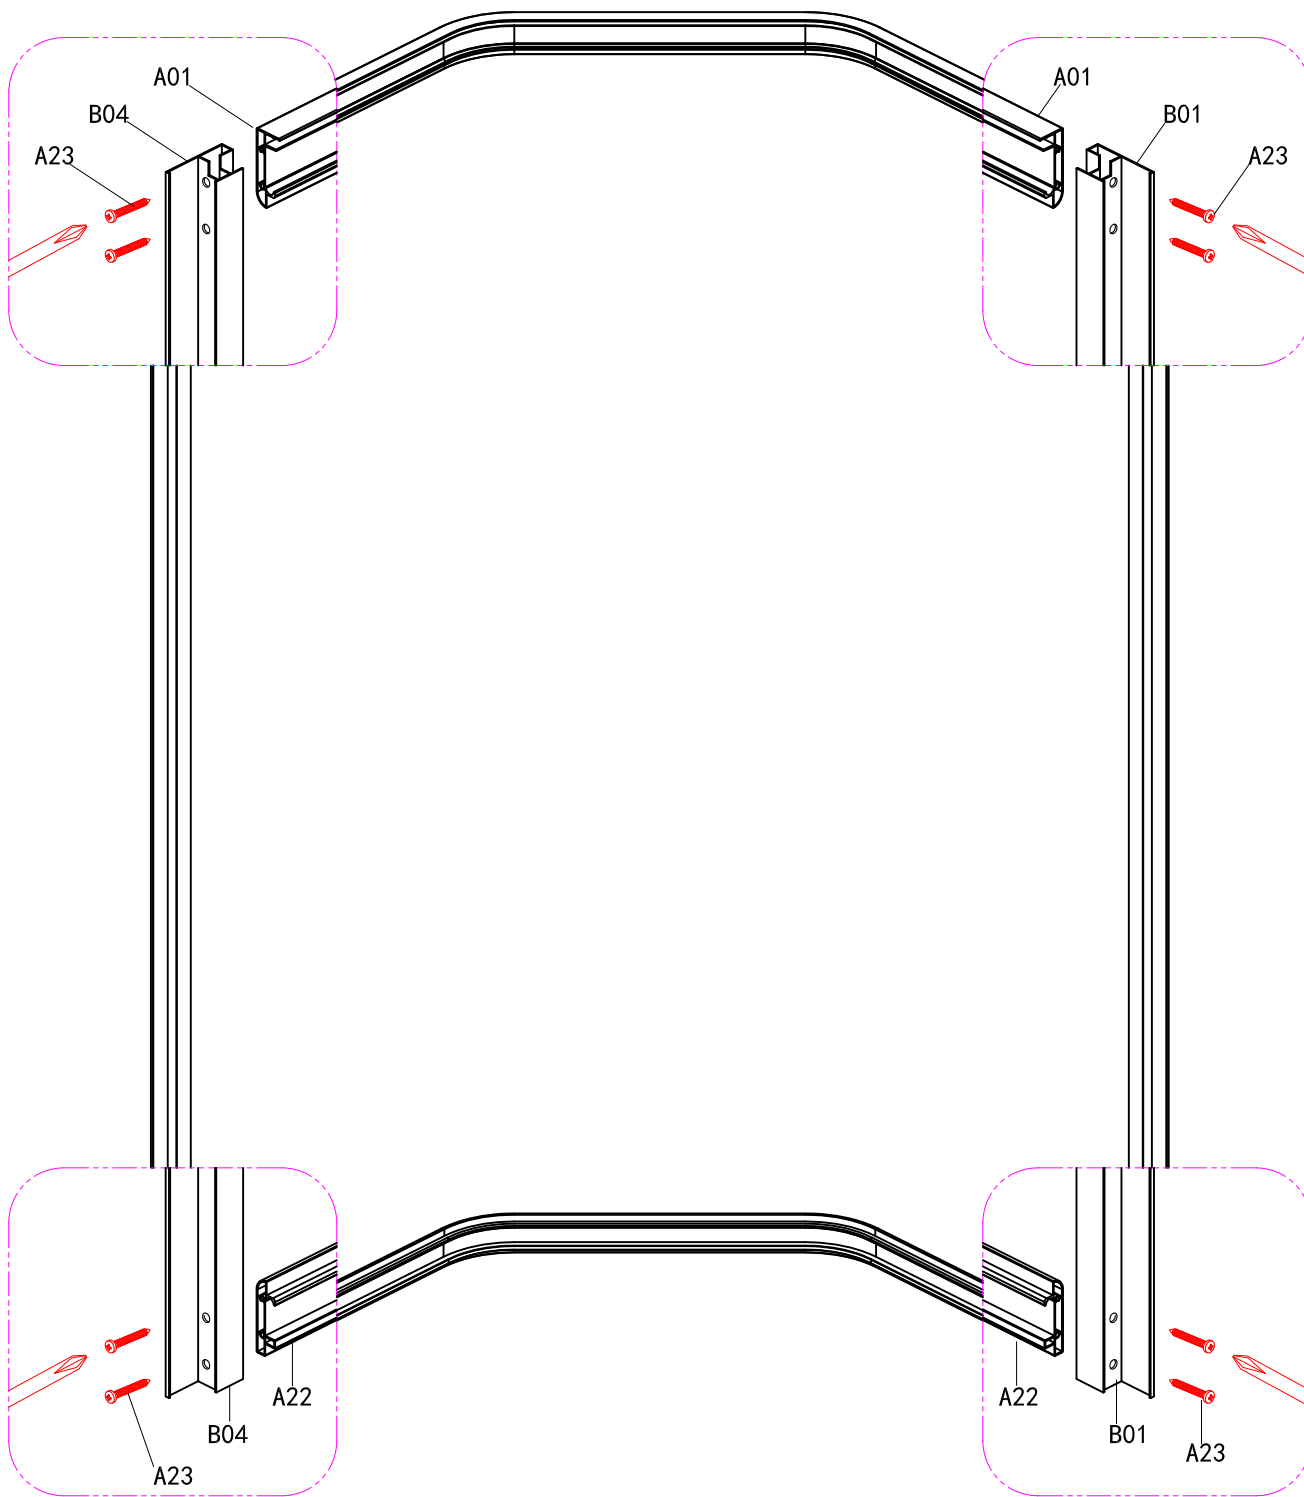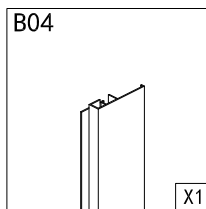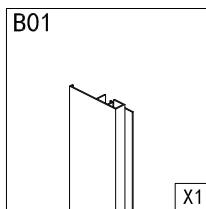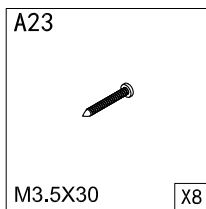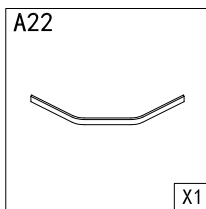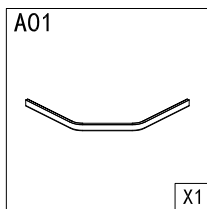      








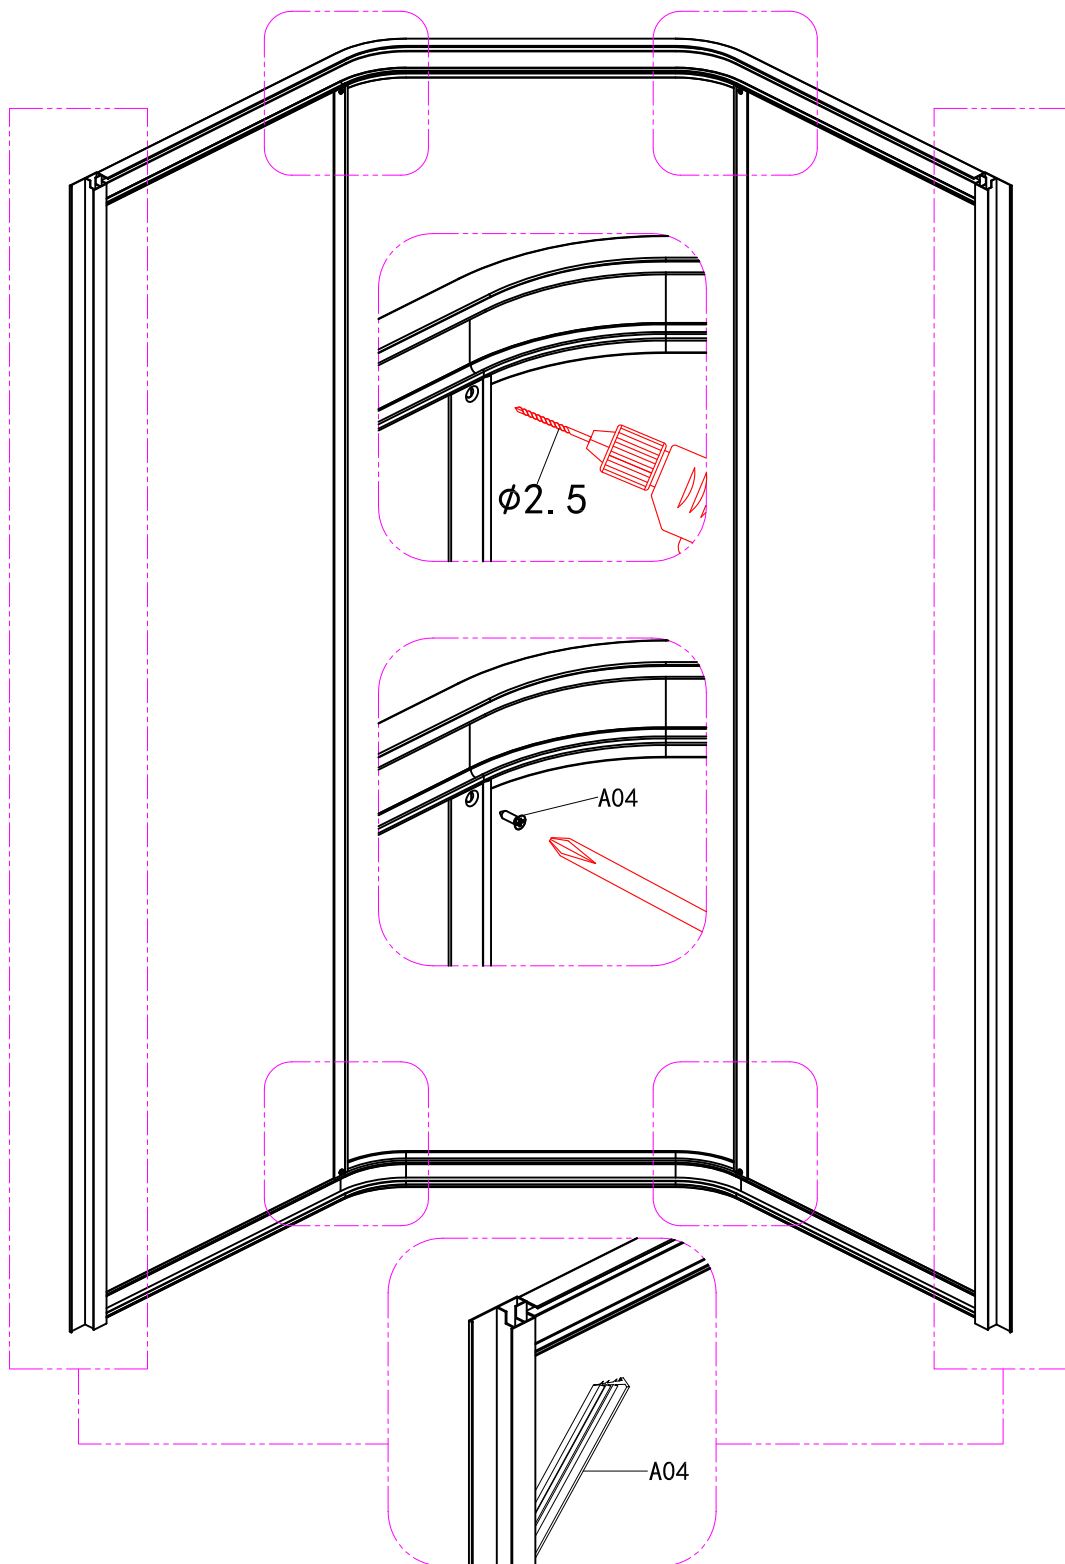 
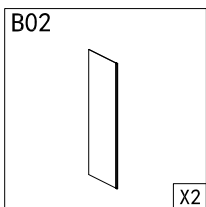 
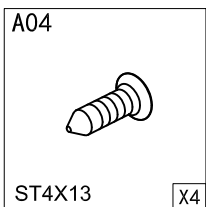 
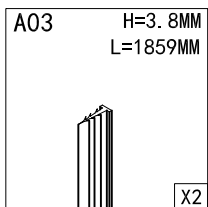 


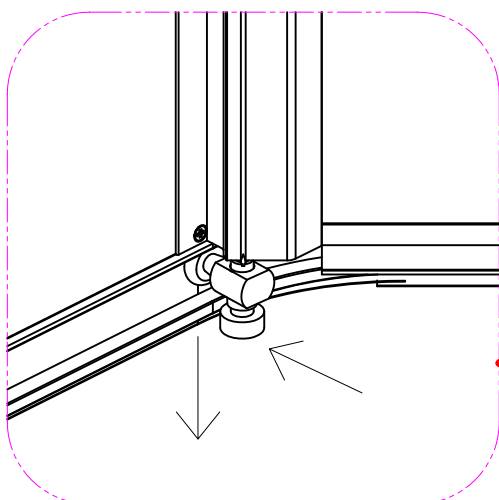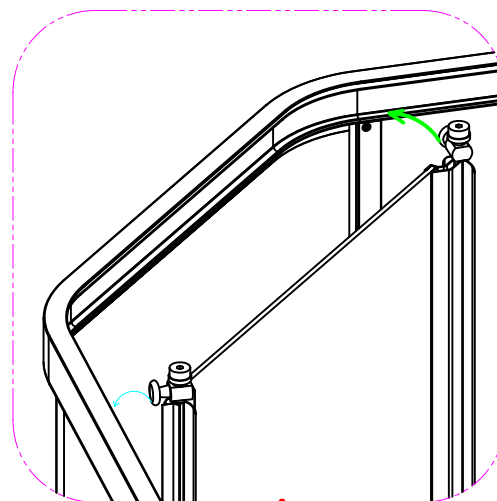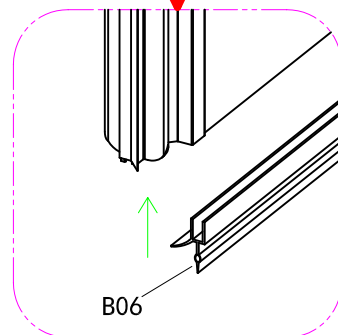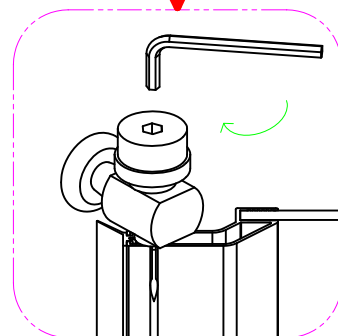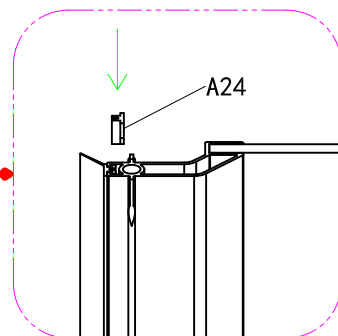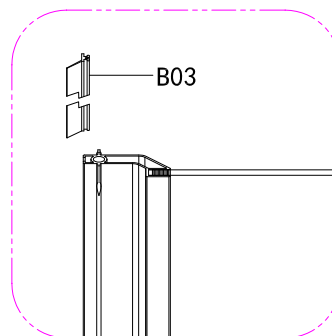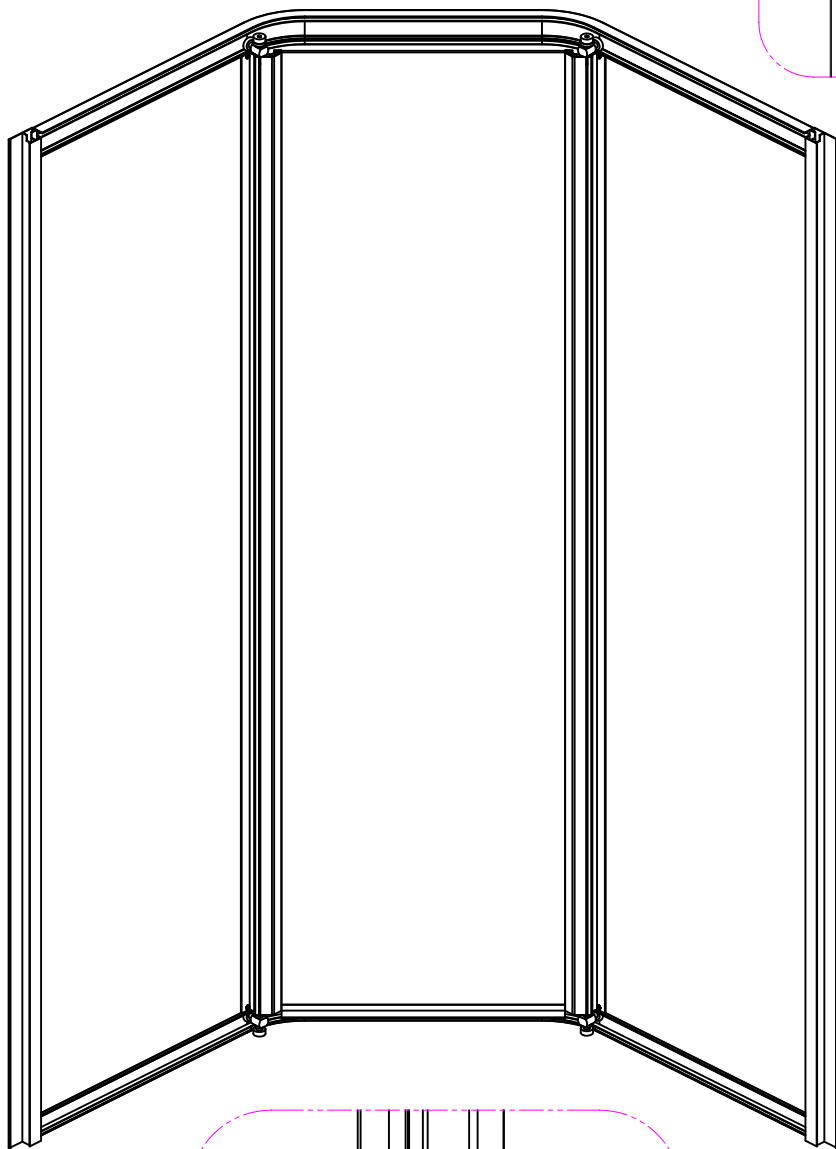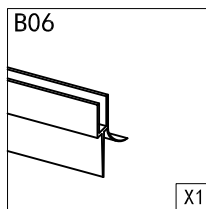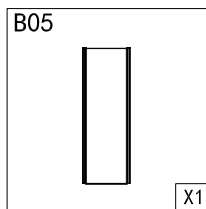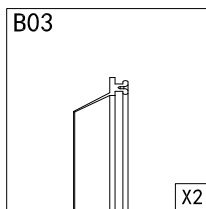                     
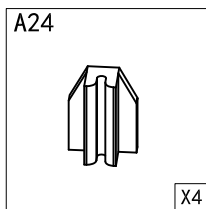 
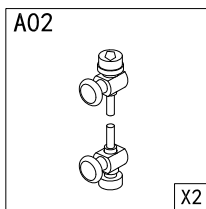 


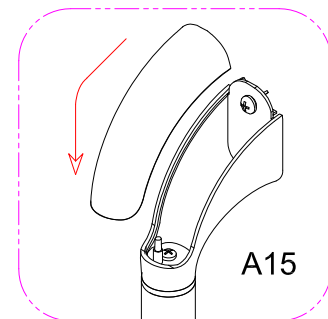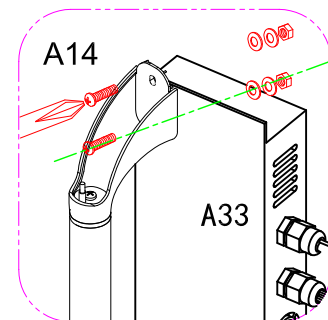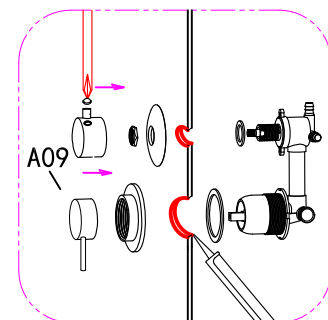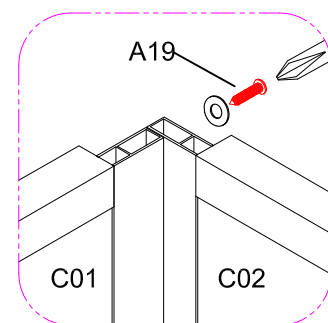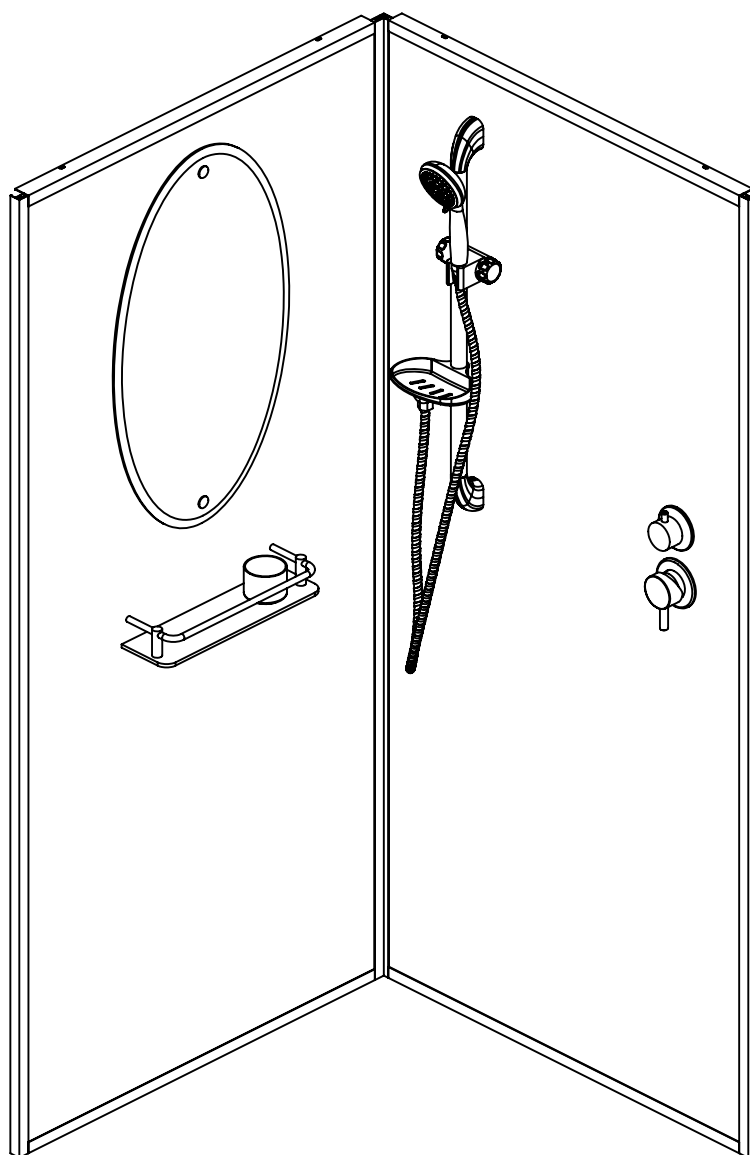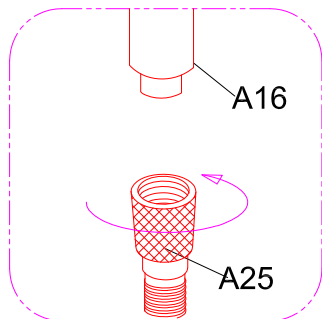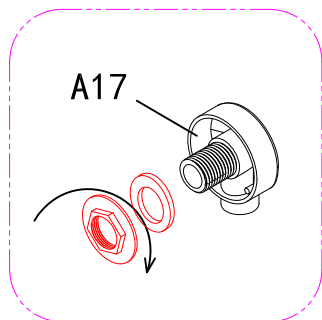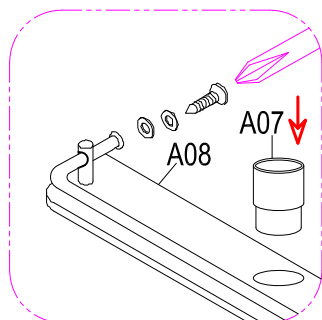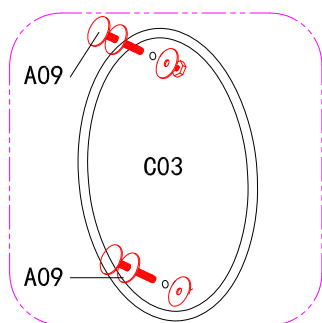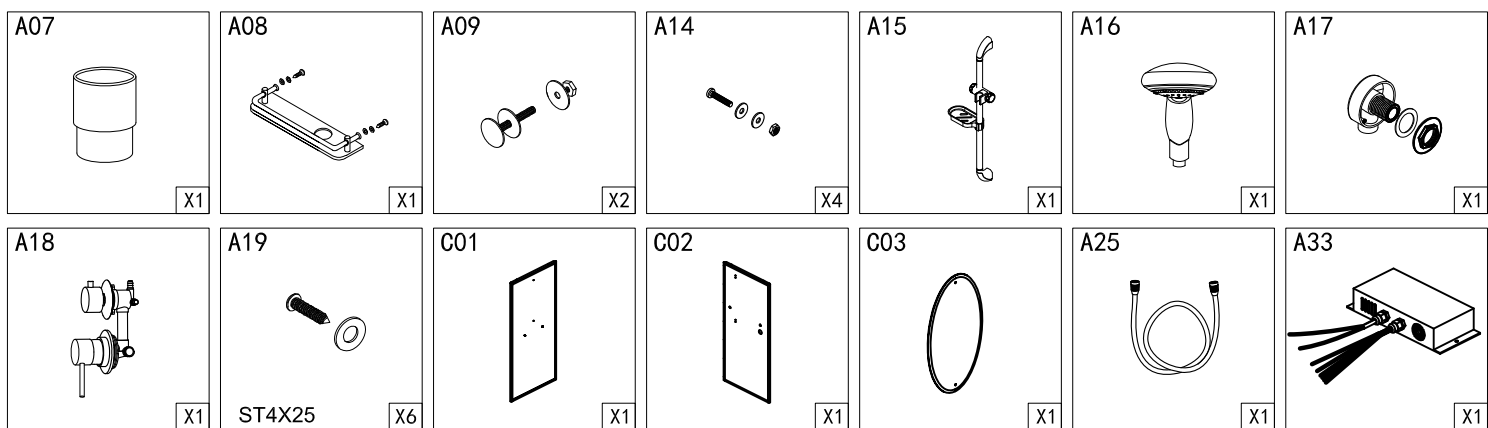






A13  X1	A12  X1	A31  X1	A32  X1	A29  ST3.5X13 X4	A30  ST3.5X38 X4
--	--	--	---	---	---

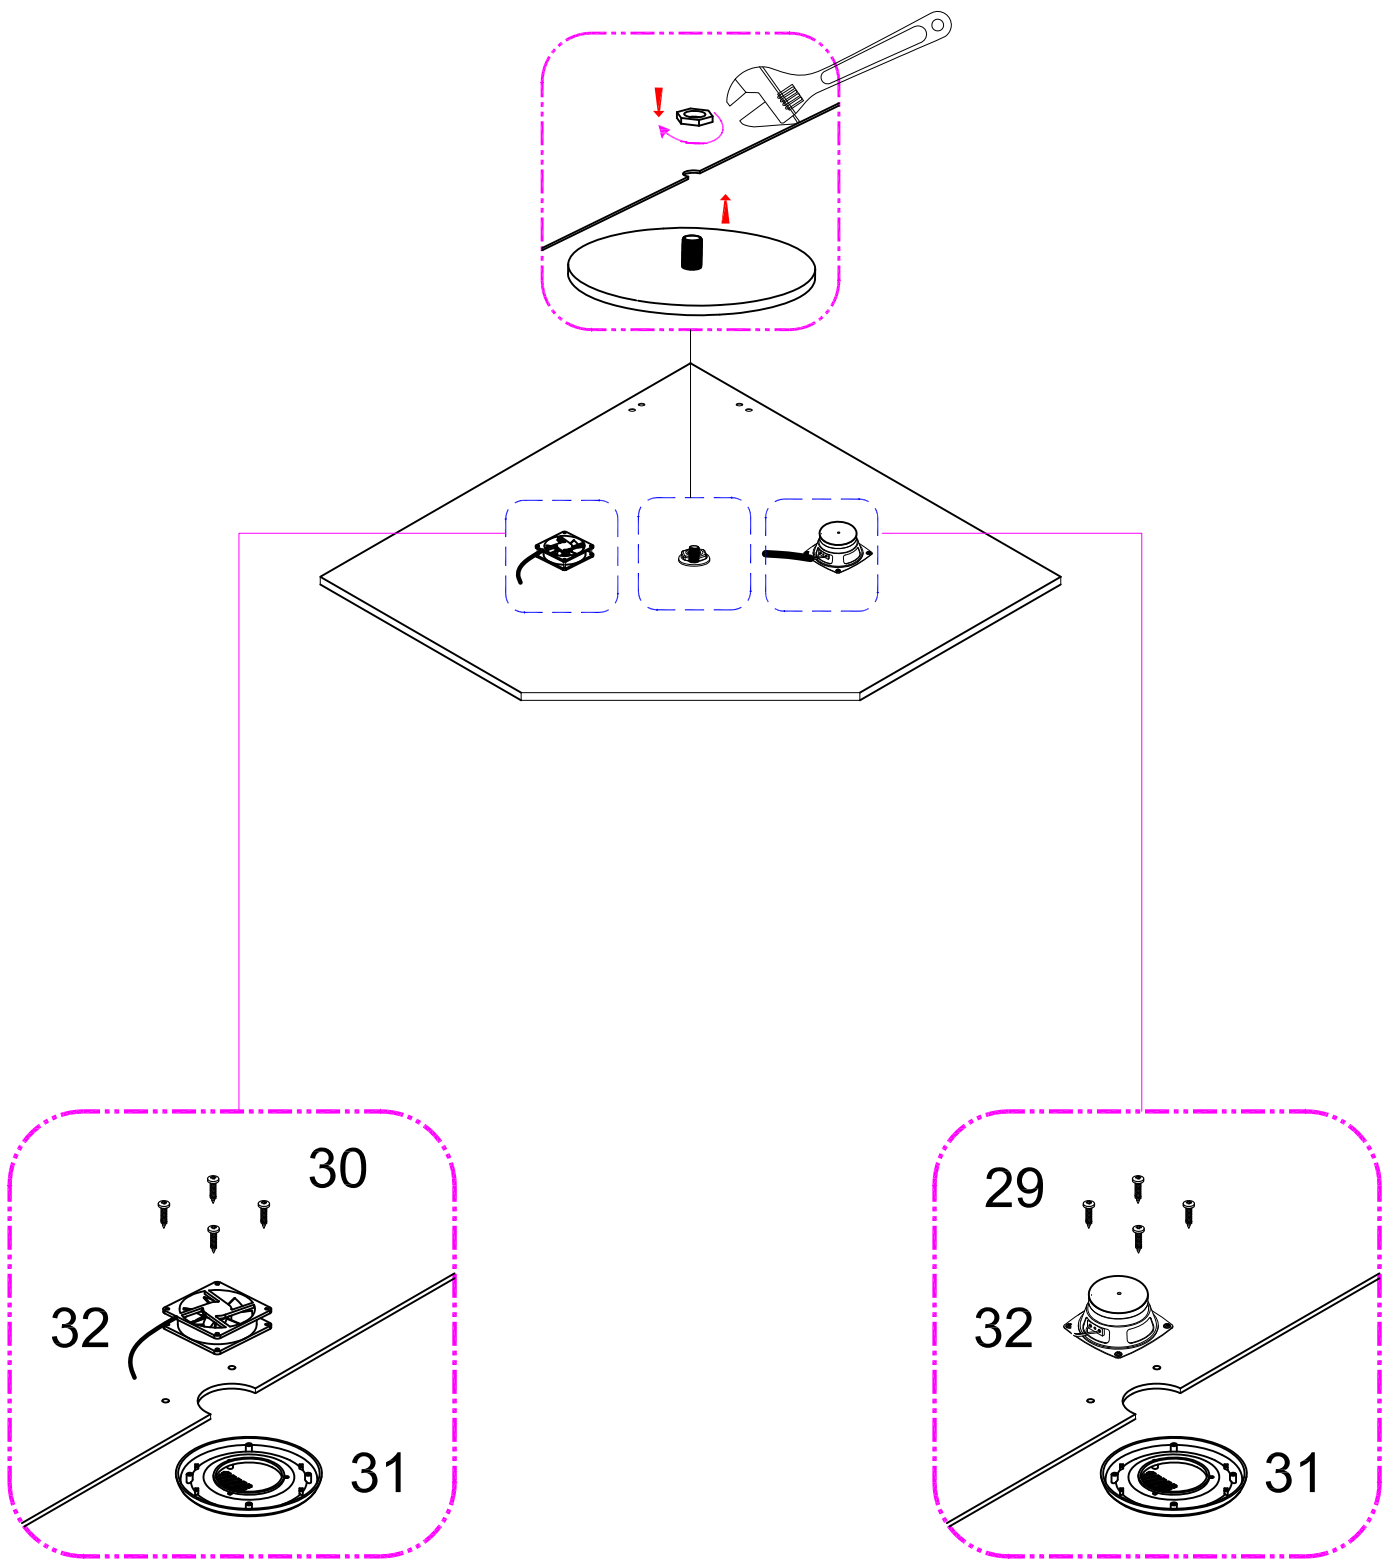 


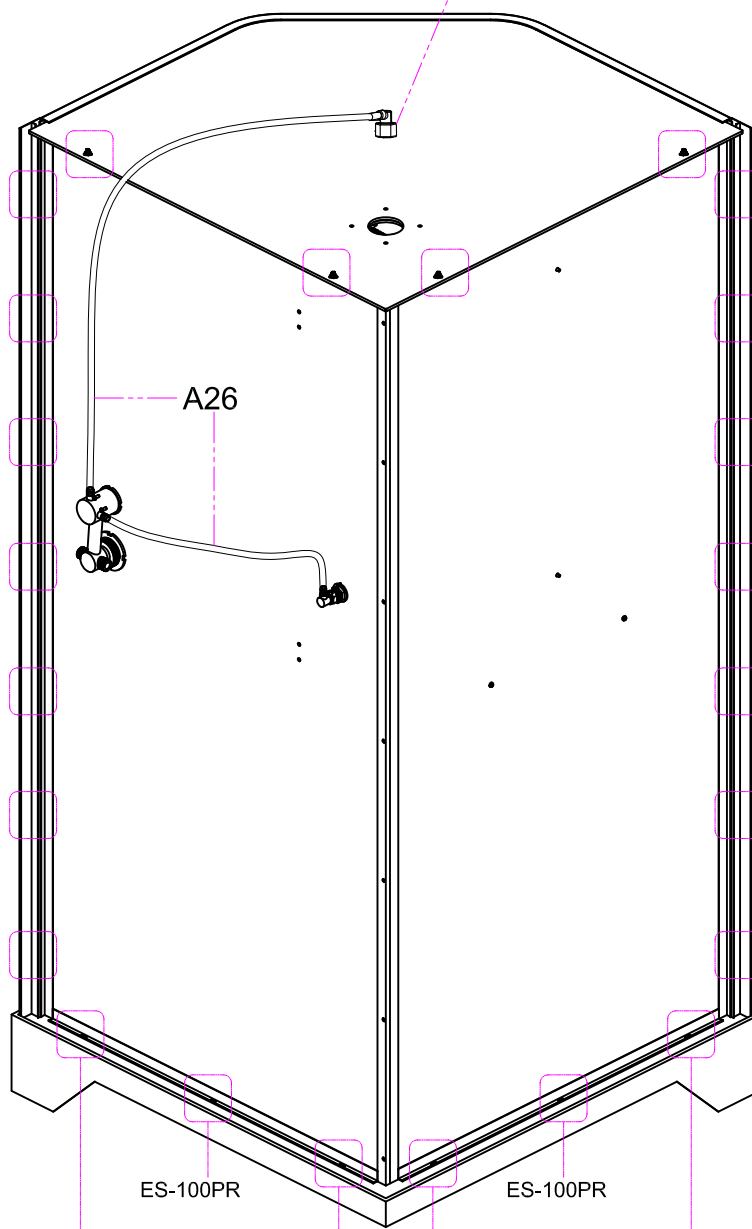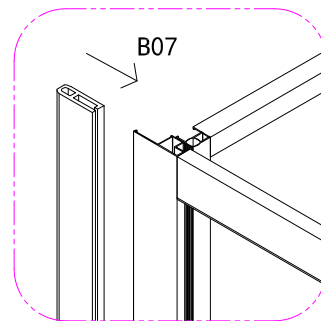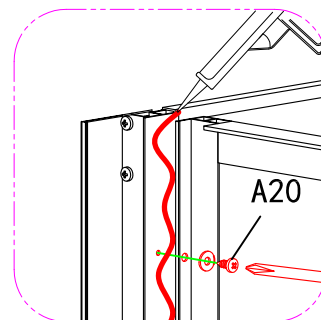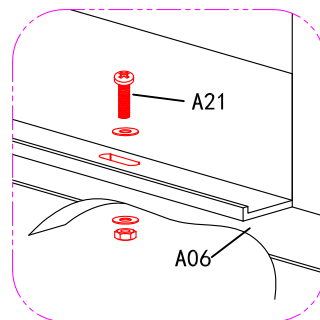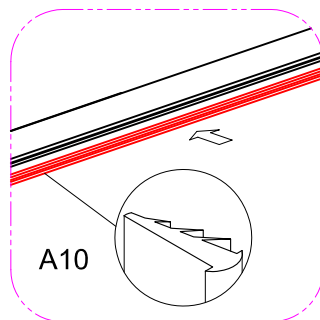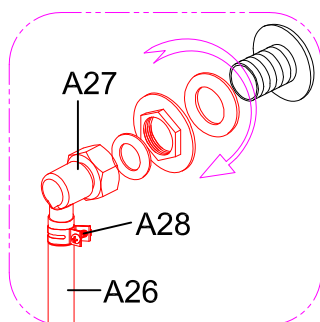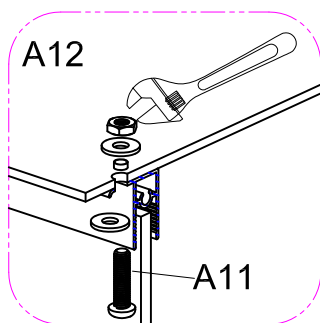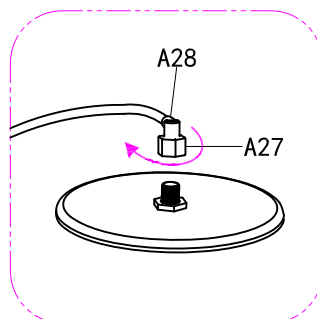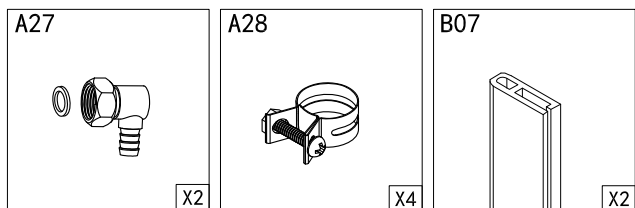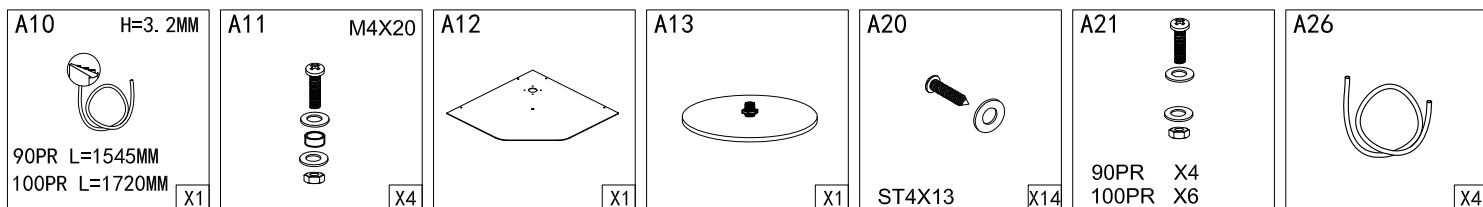          

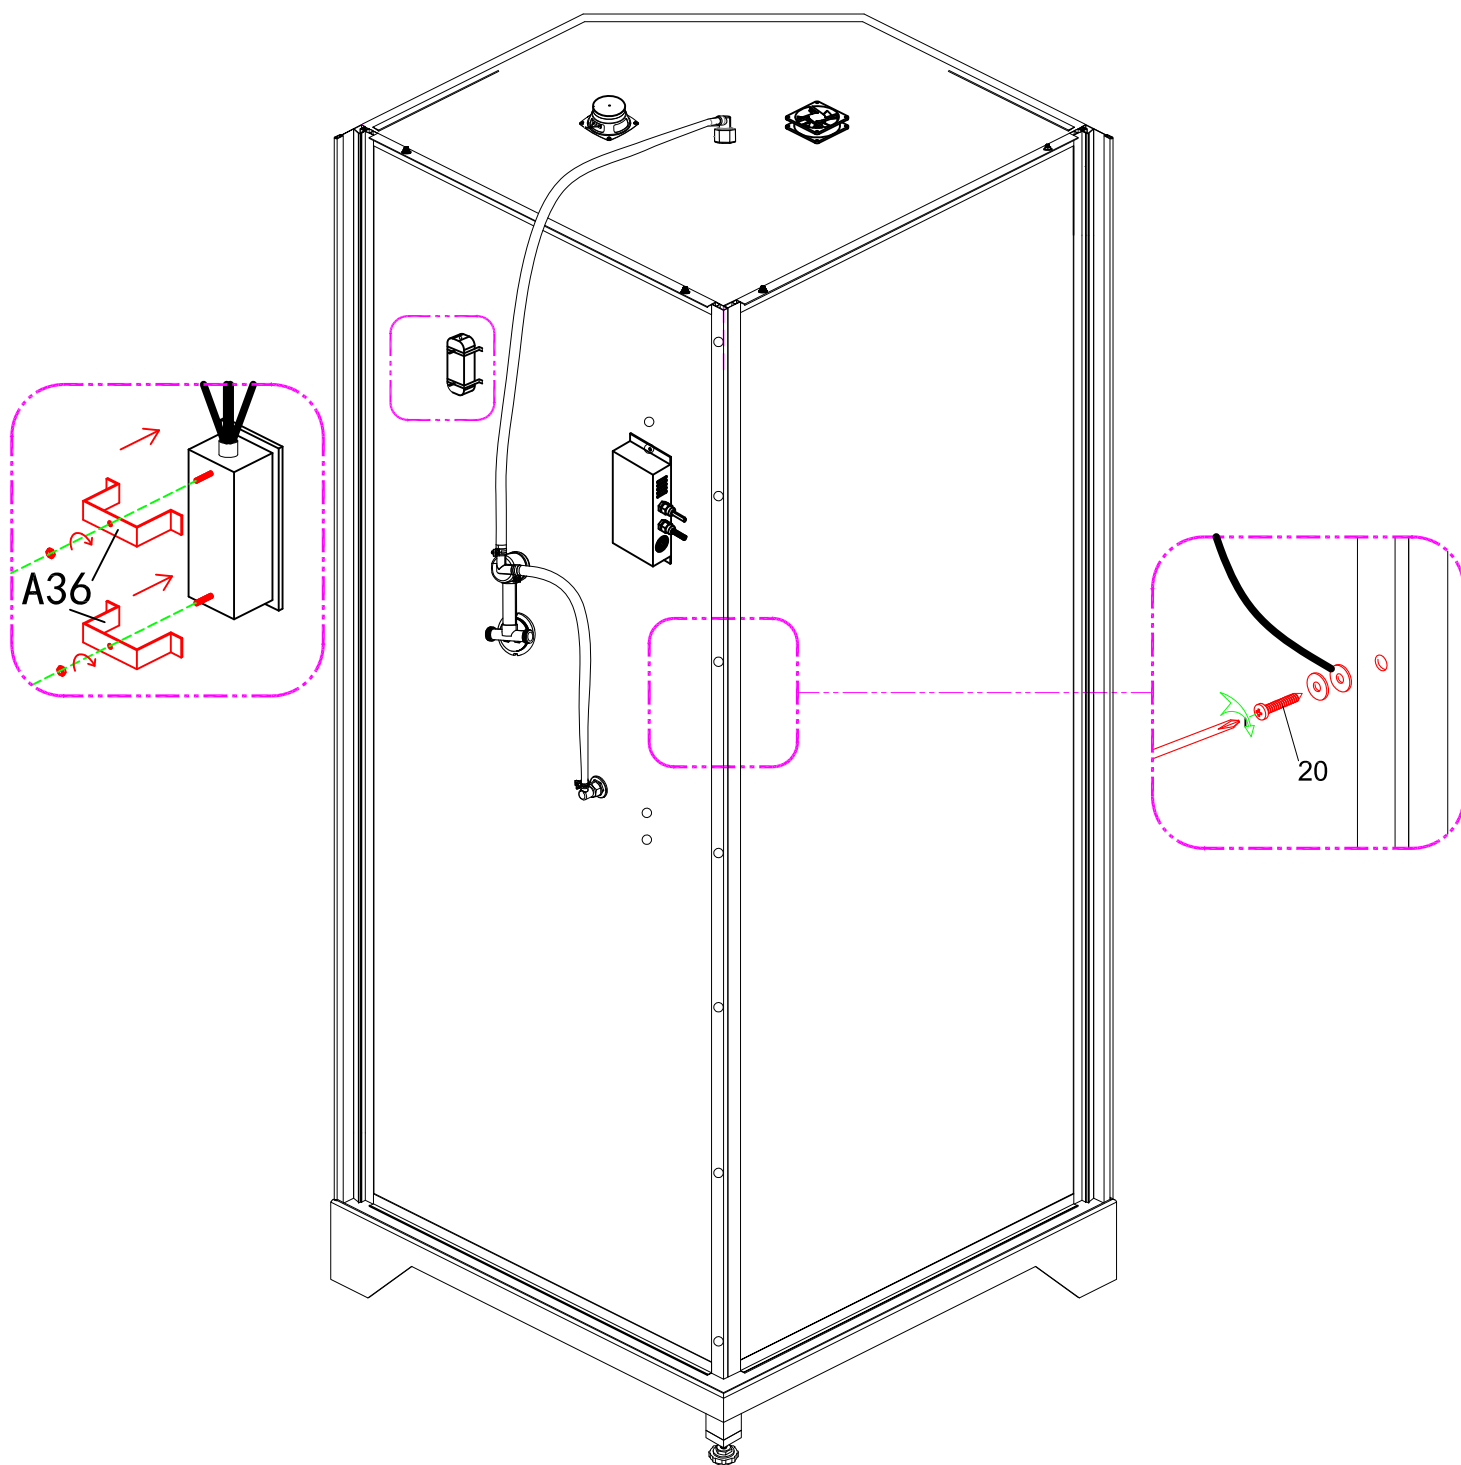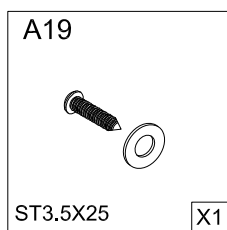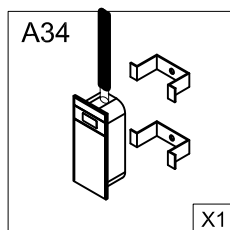   

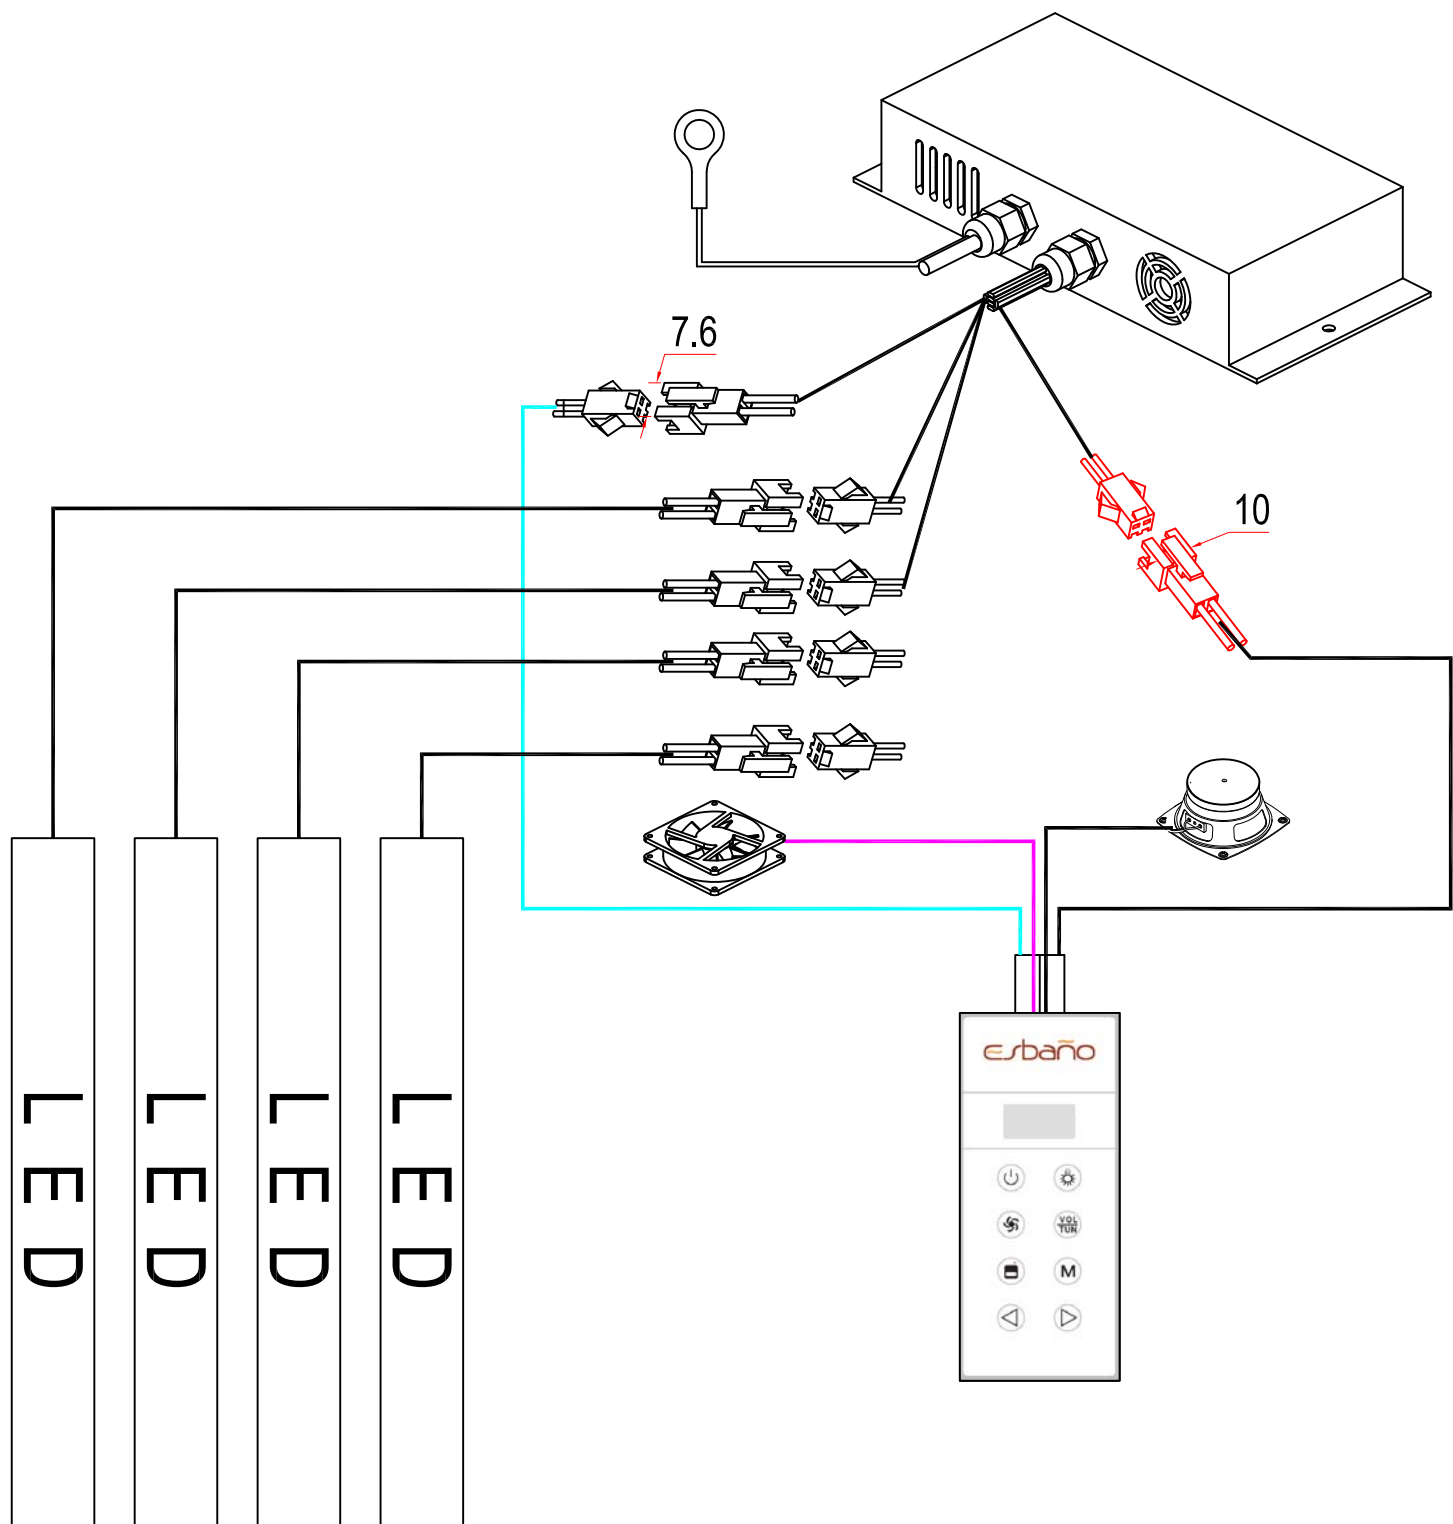 

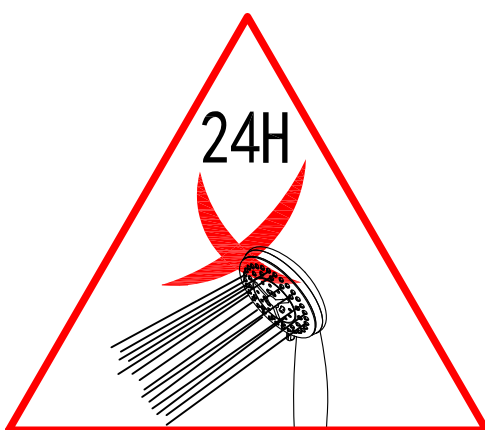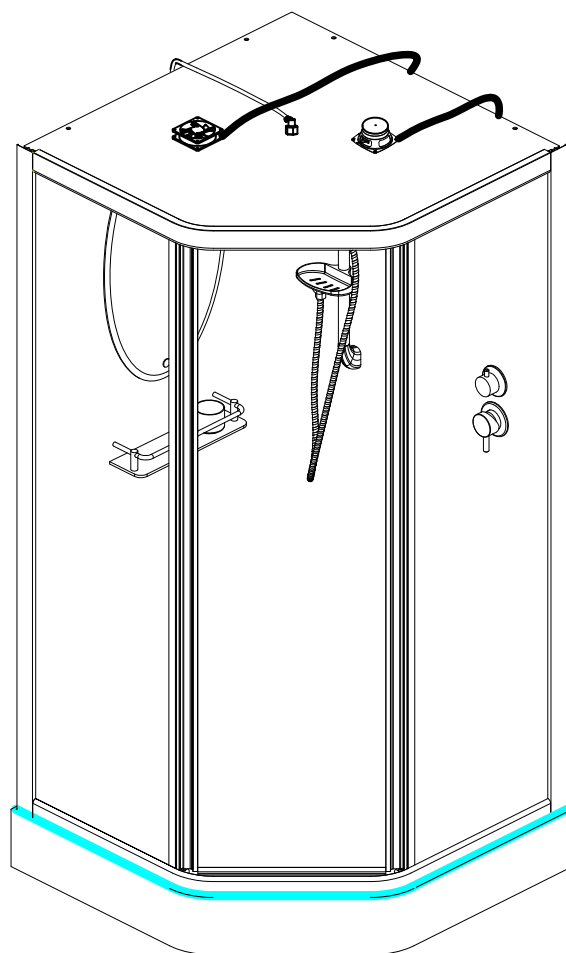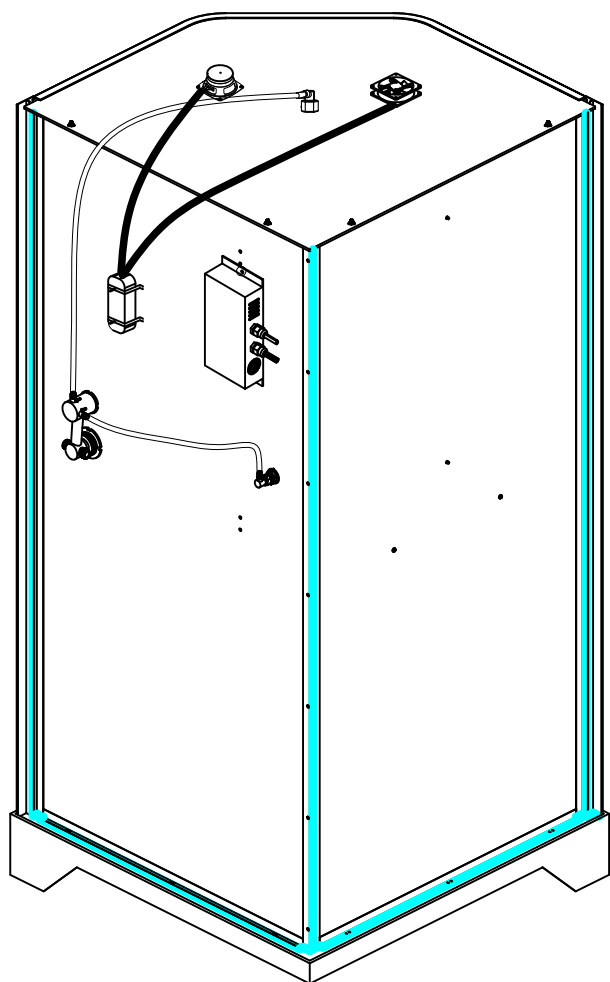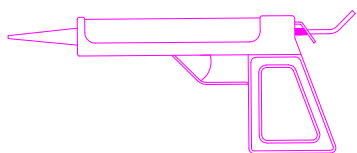     

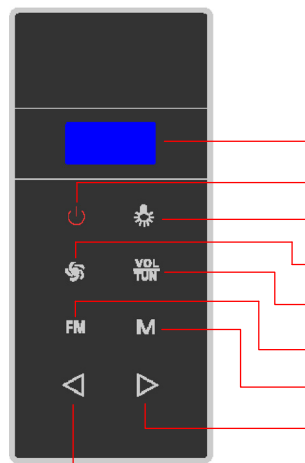

Кнопка уменьшения параметров

Нажмите кнопку «FM», чтобы включить радио или кнопкой «VOL/TUN» при работающем радио перейдите в режим «VOL». В этом режиме на экране ЖК-дисплея появится слово VOL и текущий уровень громкости. Кнопками ◀ или ▶ отрегулируйте громкость в диапазоне от 0 до 10.