


1



Remove all dirt and dust from the application surface and make sure the surface is dry and clean.

2

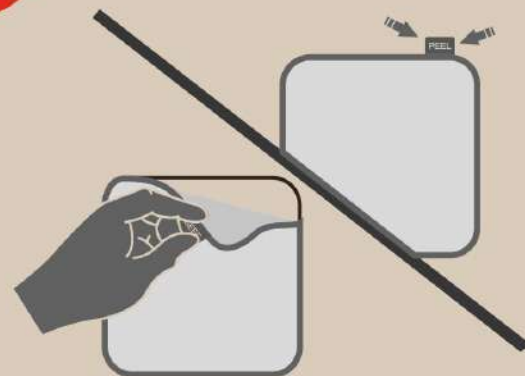


Peel off the protective layer from the SRS adhesive pad.

3



Stick the SRS adhesive pad on the wall. Rub the pad and press firmly. If there are any air bubbles, remove them by rubbing over towards the edge.

4

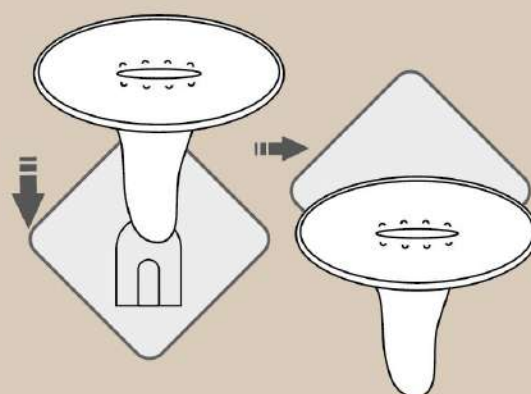

Fit the holder on the hook.